1/3

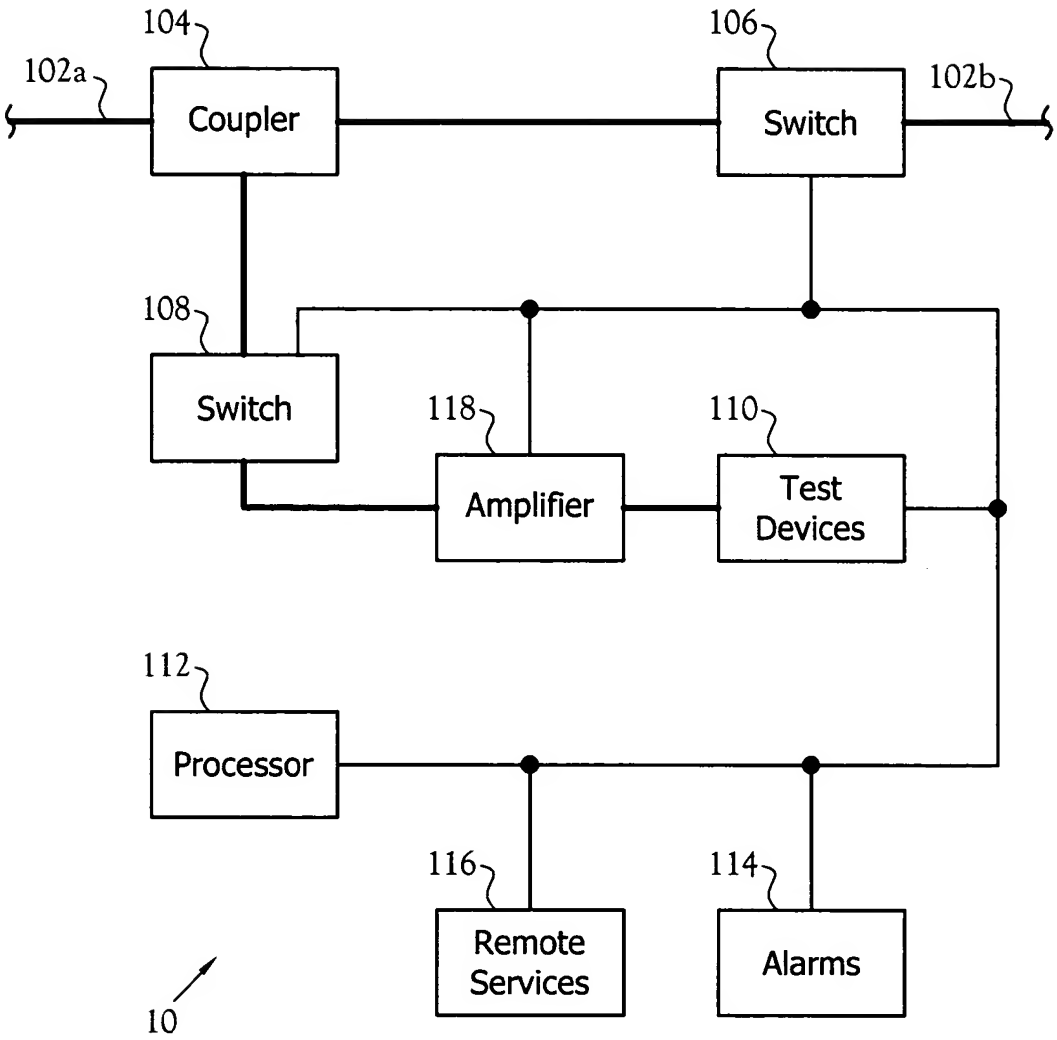
104
106
102a
Coupler
Switch
102b
108
Switch
118
110
Amplifier
Test Devices
112
Processor
116
114
Remote Services
Alarms
10

Fig.1

2/3

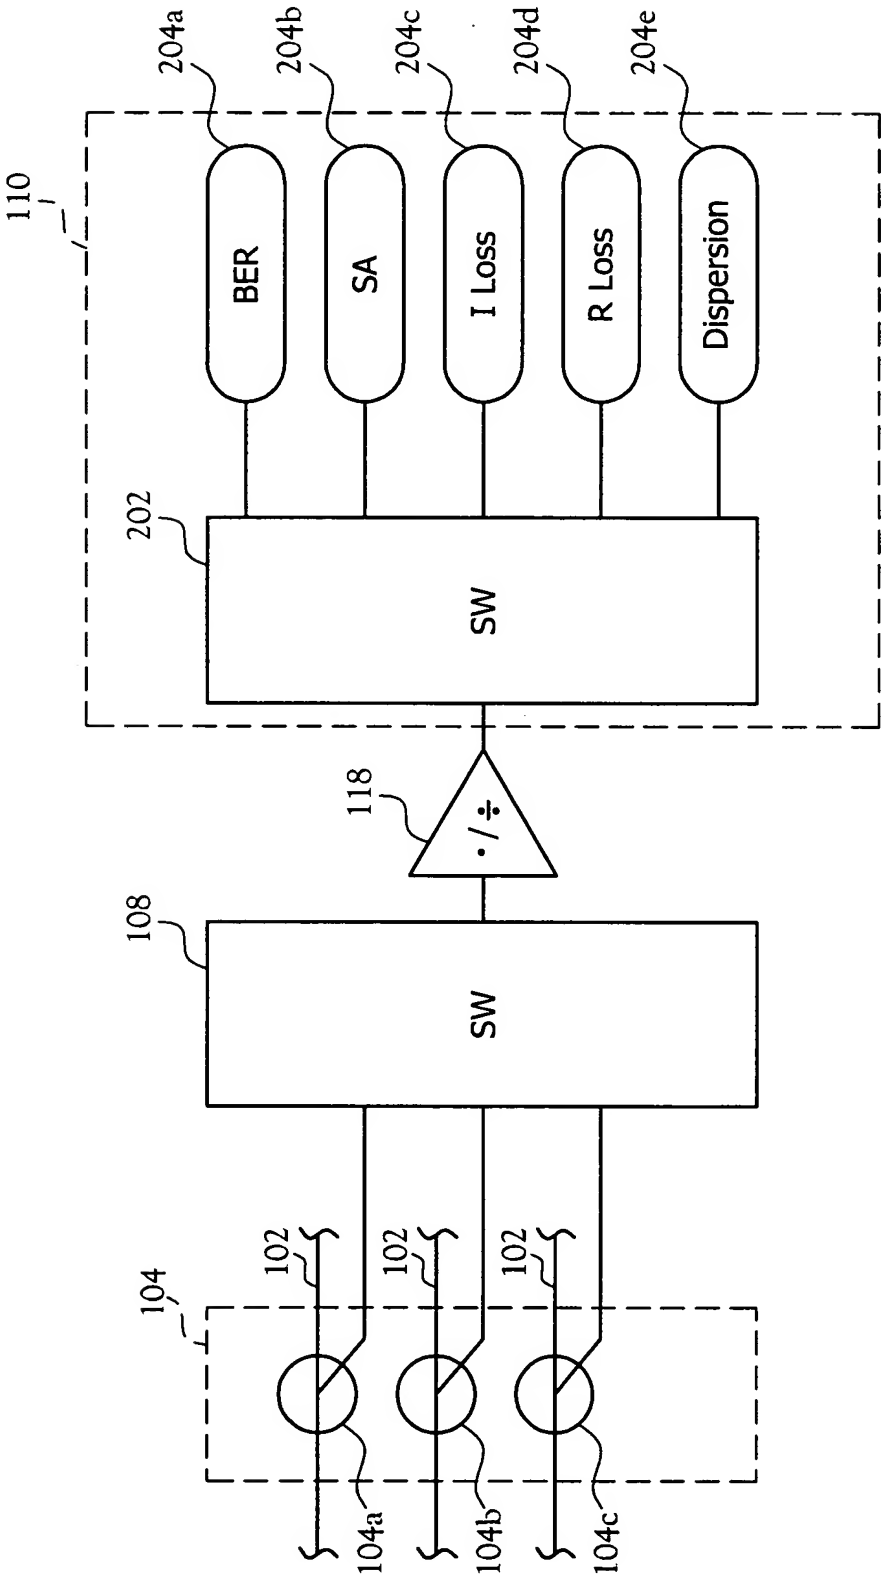
110
204a
204b
204c
204d
204e
BER
SA
I Loss
R Loss
Dispersion
202
SW
118
·/÷
108
SW
104
102
102
102
104a
104b
104c

Fig.2

3/3

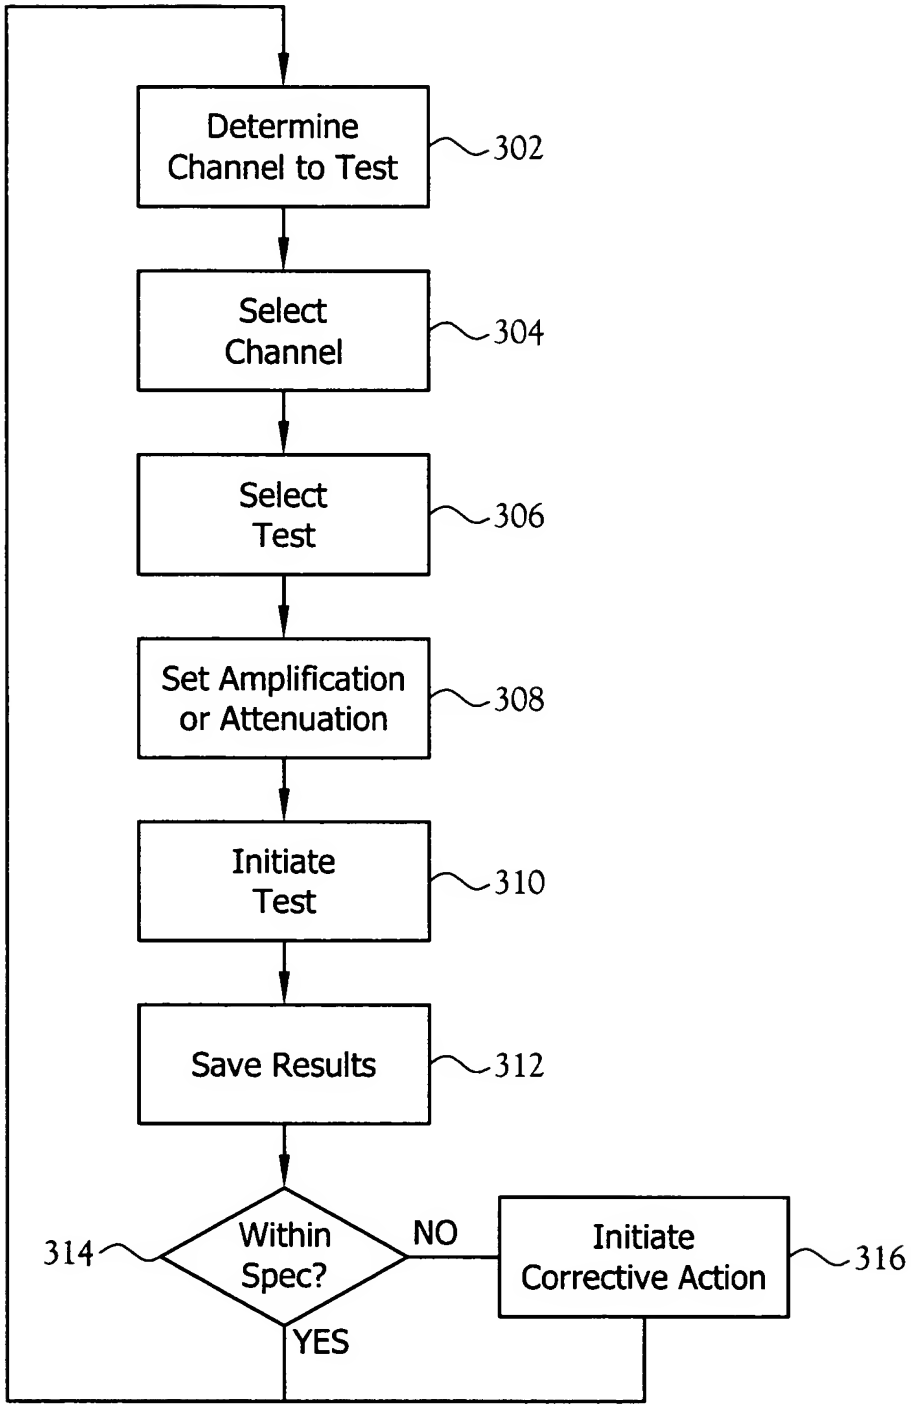
Determine Channel to Test
302
Select Channel
304
Select Test
306
Set Amplification or Attenuation
308
Initiate Test
310
Save Results
312
Within Spec?
314
NO
Initiate Corrective Action
316
YES

Fig.3